



KIT ADMISSION DIRECTE DIRECT INDUCTION KIT



VW GOLF III Vr6

S.A.S.
Chrono'Sport
122 rue du faubourg Saint Jean
ZA de l'AVELON - 60000 BEAUVAIS -
FRANCE
00.33.3.44.02.64.64
00.33.3.44.02.87.10

Part n° :P129

FITTING INSTRUCTION

- 1)- Remove the upper part of the air box.
- 2)- Fix the GREEN filter onto the air flow meter.
- 3)- Fix the attaching bracket onto the green filter then locate the bracket onto the upper cross member.
- 4)- Drill a 8.5 mm hole in the upper cross member. Then fix the attaching bracket with the fixings to it.

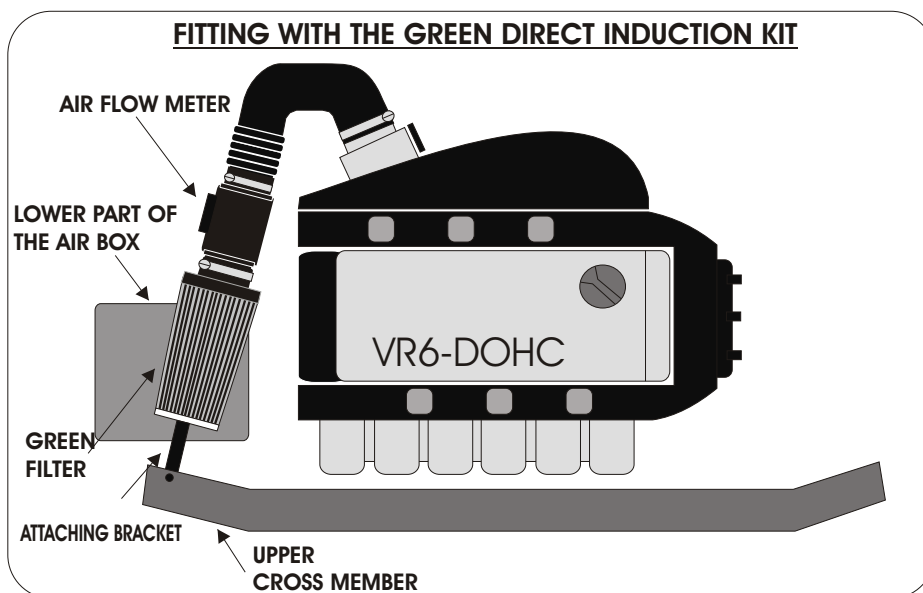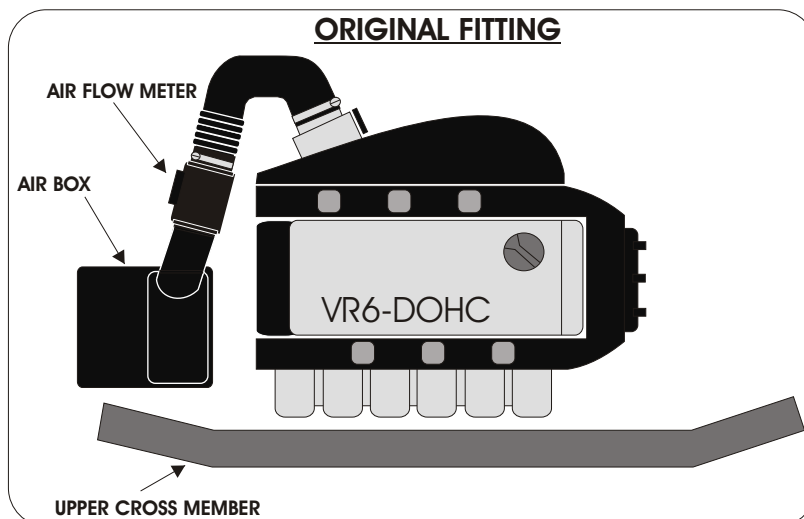

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products..

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.