



ort no naci

FITTING INSTRUCTION

Remove the complete air box.

Disconnect the negative pressure pipe B from the air box (see diagram A)

Disconnect the temperature probe from the air box (see diagram A)

Remove the pipe A (See diagram A)

Fix the pipe of the kit with the GREEN filter onto the inlet manifold (see diagram B)


Fix the filter with the attaching bracket then drill the wheel arch with a hole of 0,4.(see diagram B)


Fix the filter with the attaching bracket and the screws provided (see diagram B)

Fix the negative pressure pipe B and the temperature probe onto the pipe of the kit.

(See diagram B)in the holes made for that. .

Adjust the filter so that it does not touch a mechanical part.

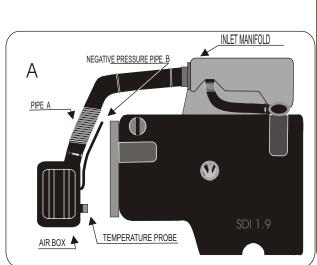

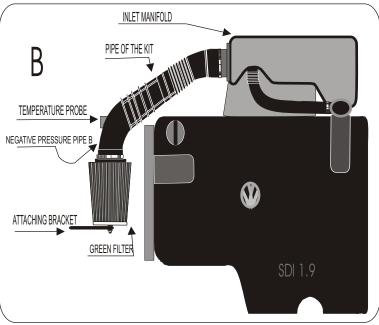

IMPORTANT:

The running of your engine is linked directly with the maintenance of the air filter. Clean your air filter every 7000 kms or 4500 miles with Green cleaning products.

WARRANTY:

The air filter guarantee is for defects in materials and workmanship only. Guarantee is void if the air filter is damaged by an accident, unreasonable use, neglect, misuse, abuse, improper installation or other causes not arising out of defects in materials and workmanship. The induction kit is a technical product so it is necessary to have some basic mechanical skills. If problems do not hesitate to have your induction kit fitted by a professional.

Green Technical dept: TEL: 00.33.3.44.02.64.64