



## KIT ADMISSION DYNAMIQUE DYNAMIC INTAKE KIT

AUDI A4 1.8L 20V 125HP 1995>  
VW PASSAT 1.8L 20V 125HP 1995>


S.A.S  
**Chrono'Sport**  
122 rue du faubourg Saint Jean  
ZA de l'AVELON - 60000 BEAUVAIS -  
FRANCE  
03.44.02.64.64  
03.44.02.87.10

**PART N° :DW 006**

## FITTING INSTRUCTIONS

- Depose and delete the complete air box.(scheme A)
  - Depose and delete the fresh air scoop.(scheme A)
  - Disconnect the air flow-meter of the air box.(scheme A)
  - Screw the bracket of the kit on the air flow-meter with the provided joint and screw.(scheme B)
  - Fit together the filter **TWISTER** on the air flow-meter with the provided collar.(scheme B)
  - Position and fix the **TWISTER** escapade of its original attaching lug on the original rest of the air box with the original screw.(scheme B)
  - Depose and cut the shield's railings to make arrive the fresh air towards the filter.(scheme C)
  - Fit together and fix the air pipe on the **TWISTER** to propel the fresh air inside the TWISTER.  
(Scheme B,C)
  - Fix the air pipe with the provided plastics collars.
- BE CAREFULL:**  
To have the best performance of your **TWISTER** the filter must imperatively be **stimulated with the case.**  
(scheme C)

Position the **TWISTER** so that it doesn't touch any mechanical organ.

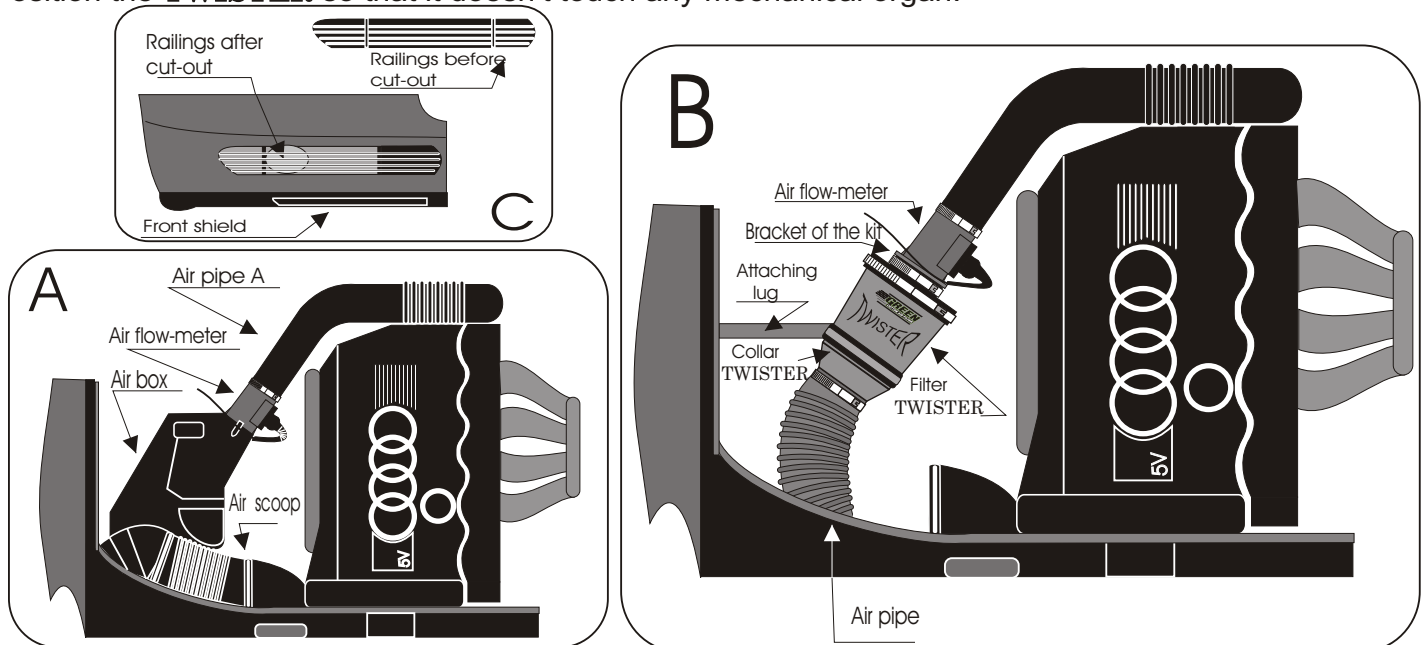

### IMPORTANT

The working of your engine, is directly binded by the maintenance of your air filter. Clean your filter regularly ( around 7000 kms) only with the cleaning materials recommended by GREEN.

### WARRANTY

Our products are warranted against all manufacturing defect.

Our liability wouldn't be involved in the case of a malfunction due to a bad assembly, or bad use.

The direct admission kit is a technical organ, and requires some car mechanical knowledge.

In the doubt, don't hesitate to entrust the setting of your kit to a professional's care.

Technical service GREEN : TEL: 03.44.02.64.64



## Comment utiliser et entretenir votre filtre à air AIR FILTER SERVICE INSTRUCTIONS

Votre filtre à air doit être nettoyé entre 7000 kms et 10000 kms. ou tous les 6 mois.

La périodicité de nettoyage est directement liée à l'environnement dans lequel vous circulez.

### Procédure de nettoyage des filtres

**UTILISER EXCLUSIVEMENT LES PRODUITS D'ENTRETIEN RECOMMANDÉS PAR GREEN**

- Déposer le filtre.
- Souffler le filtre, afin d'évacuer le plus gros des impuretés.  
ATTENTION- maintenir la "soufflette" à une distance d'environ 15cm.
- Imprégner le filtre de nettoyant GREEN.
- Laisser agir le produit environ 15 minutes.
- Vous pouvez frotter le filtre à l'aide d'un pinceau
- Rincer le filtre à l'eau CHAUDE, par l'intérieur puis par l'extérieur
- Pour les filtres fortement encrassés, n'hésitez pas à renouveler l'opération.
- Secouer le filtre pour évacuer l'eau.
- Il est possible de se servir d'air comprimé pour évacuer l'eau.
- Faites sécher le filtre sur un radiateur tiède, ou à l'aide d'un sèche-cheveux.
- Vaporiser l'huile GREEN sur toute la surface du filtre, uniformément mais sans excès



## How to use and maintain your air filter AIR FILTER SERVICE INSTRUCTIONS

It is essential to oil the GREEN filter using the supplied quantity of oil. Clean your air filter between 7000 km and 10000 km or every 6 months.

Cleaning periodicity is linked directly to the environment in which you drive.

### Procedure for cleaning the GREEN filters

**USE EXCLUSIVELY THE MAINTENANCE PRODUCTS RECOMMENDED BY GREEN**

- Remove the filter
- Blow out the filter to expel the largest impurities  
CAUTION: maintain the blower at a distance of 15 cm or so.
- Impregnate the filter with GREEN cleaner
- Allow the product to act for about 15 minutes
- You can rub the filter with a paint brush
- Rinse the filter with hot water first on the inside then on the outside
- For deeply fouled filters, be sure to repeat the operation
- Shake the filter to evacuate the water
- Compressed air can be used to evacuate the water
- Dry the filter on a tepid radiator or using a hair dryer
- Spray GREEN oil onto the entire surface of the filter, uniformly but not excessively

## NOMENCLATURE

Article	Référence	Q
FILTRE FILTER	TW 85	1
CHAPE ADAPTOR	BR 02	1
JOINT CHAPE	JOINT	1
PATTE BRACKET	FIX 6	1
VIS SCREW	V615BTR	4
RONDELLE WASHER	RP 06	4
ECROU NUT	ECN 06	4
VIS SCREW	VTH8.20	1
RONDELLE WASHER	RP 08	3
ECROU NUT	ECN 08	1
COLLIER CLAMP	130/150	1
COLLIER CLAMP	CL 11420	1
COLLIER CLAMP	70/90	2
COLLIER PLASTIQUE PLASTIC CLAMP	CP 360	2
COLLIER PLASTIQUE PLASTIC CLAMP	CP 290	3
GAINE	G80TW/1000	1



## Como utilizar y cuidar su filtro para aire AIR FILTER SERVICE INSTRUCTIONS

Su filtro para aire debe ser limpiado entre los 7000 km y los 10.000 km o cada seis meses.

La periodicidad de limpieza es directamente ligada con el medio ambiente en el que circula usted.

### Proceso de limpieza de los filtros

**UTILIZAR EXCLUSIVAMENTE LOS PRODUCTOS DE LIMPIEZA RECOMENDADOS POR GREEN**

- Depositar el filtro.
- Soplar el filtro a fin de despejar el máximo de impurezas.  
CUIDADO: mantener el fuelle a una distancia de unos 15 cm.
- Imregnar el filtro con el producto para la limpieza Green.
- Dejar el producto actuar unos 15 minutos.
- Puede usted frotar el filtro con un pincel.
- Enjuagar el filtro con agua caliente, por le interior y luego por le exterior.
- Para los filtros muy ensuciados, no vacile en repetir la operación.
- Sacudir el filtro para quitar el agua.
- Es posible utilizar aire comprimido para quitar le agua.
- Seque usted el filtro en un radiador tibio o utilice un secador.
- Vaporizar el aceite Green en toda la superficie del filtro uniformemente pero sin exeso.

